 


Connector Included Cable Documents

Connector Conversion / Branch Cable

▼ Mitsubishi / Omron Supported Cable Connection Diagram Product Page 587 ~ 590

FM42M-A




Connection Diagram

CN1	CN2
CN1	CN2
A1	4
A2	Not Connected
A3	Not Connected
A4	Not Connected
A5	5
A6	7
A7	9
A8	11
A9	13
A10	15
A11	17
A12	19
A13	6
A14	8
A15	10
A16	12
A17	14
A18	16
A19	18
A20	20
B1	2
B2	Not Connected
·	Not Connected
B20	Not Connected

Terminal — Shield — Terminal

 MM42B-A





Connection Diagram



CN1	CN3
CN1	CN3
XG4M-4030-T	XG4M-2030-T
1	1
2	2
3	3
·	·
18	18
19	19
20	20
·	·
21	1
22	2
23	3
·	·
38	18
39	19
40	20

Relay Terminal Side


 
FM48A-A

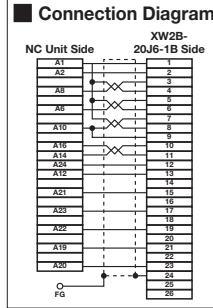


FM48D-A

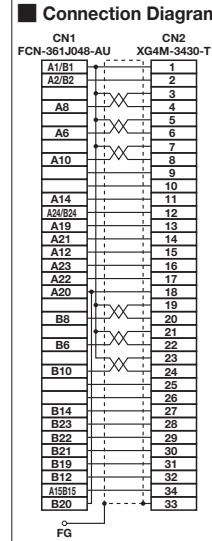 

FM48F-A

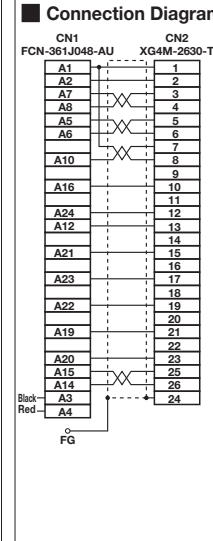 

FM42Y-A

 


Connection Diagram

CN1	CN2
CN1	CN2
FCN-361J040-AU-F	HIF38A-20D-2.54R
A1	20
A2	18
A3	16
A4	14
A5	12
A6	10
A7	8
A8	6
A9	4
A10	2
A11	19
A12	17
A13	15
A14	13
A15	11
A16	9
A17	7
A18	5
A19	3
A20	1
B1	Not Connected
·	Not Connected
B20	Not Connected

Relay Terminal Side


 
MM42C-A





Connection Diagram

CN1	CN3
CN1	CN3
XG4M-4030-T	XG4M-2030-T
1	3
2	4
3	1
4	2
5	5
6	6
7	7
·	·
18	18
19	19
20	20
·	·
21	3
22	4
23	1
24	2
25	5
26	6
27	7
·	·
38	18
39	19
40	20


 
FM48B-A

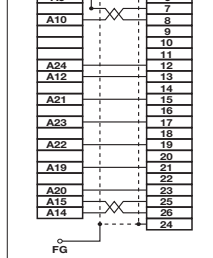


FM48E-A

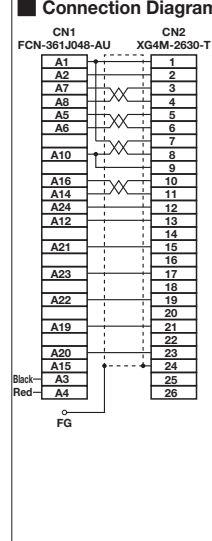 

FM48G-A

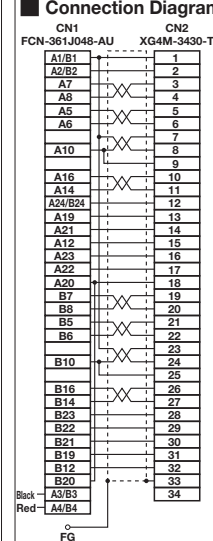 

MM42D-A

 

Connection Diagram

CN1	CN3
CN1	CN3
XG4M-4030-T	XG4M-2030-T
1	1
2	2
3	3
·	·
18	18
19	19
20	20
·	·
21	3
22	4
23	1
24	2
25	5
26	6
27	7
·	·
38	18
39	19
40	20

FM48C-A

